

Trinity GLASS REMOVAL

Turn floating plate to
gain
access to the bolts,
unscrew the 2 x 4mm
bolts on the inside of the
bracket

Loosen the 3 x allen key
bolts on the back
panel

Remove the side panel & undo
the 4 x 8mm bolts securing the
glass

```
graph TD; A[Place new glass in and tighten the bolts, when bolts are tight, loosen them by a 1/4 turn to avoid over tightening] --> B[Reverse process];
```

Place new glass in and tighten the bolts, when bolts are tight, loosen them by a $\frac{1}{4}$ turn to avoid over tightening

Reverse process